



## DISASSEMBLY AND REASSEMBLY

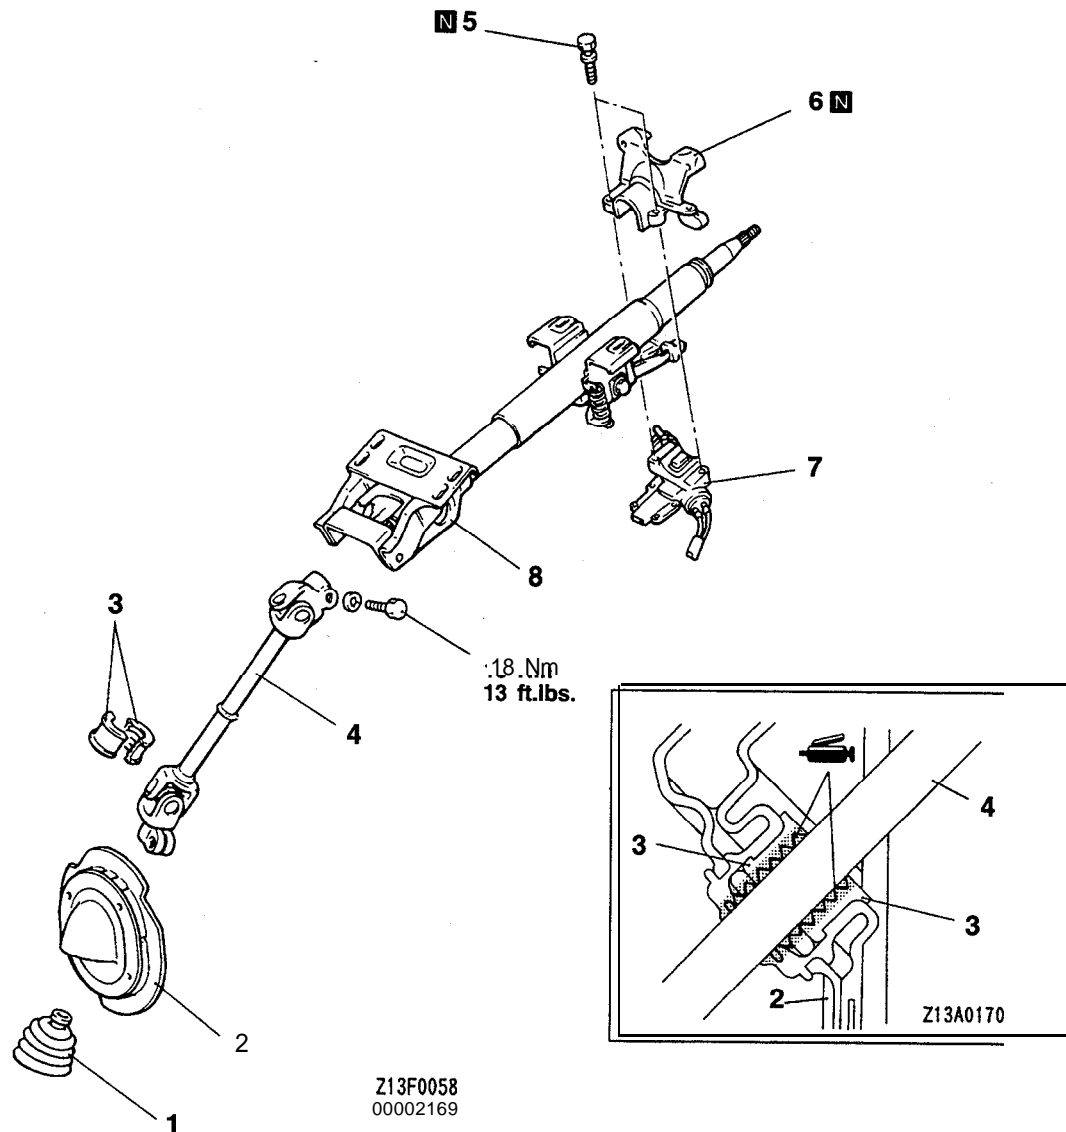

## Disassembly steps

- B◄
1. Boot
  2. Cover assembly
  3. Bearing
  4. Joint assembly

- A◄
5. Special bolts
  6. Steering lock bracket
  7. Steering lock cylinder
  8. Steering column assembly

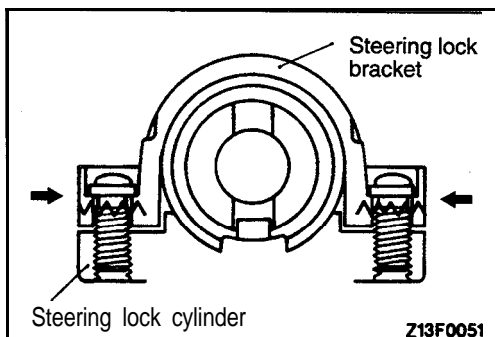

## DISASSEMBLY SERVICE POINT

## ◄A► STEERING LOCK BRACKET / STEERING LOCK CYLINDER REMOVAL

If it is necessary to remove the steering lock cylinder, use a hacksaw to cut the special bolts at the steering lock bracket side.