


JUNCTION BLOCK

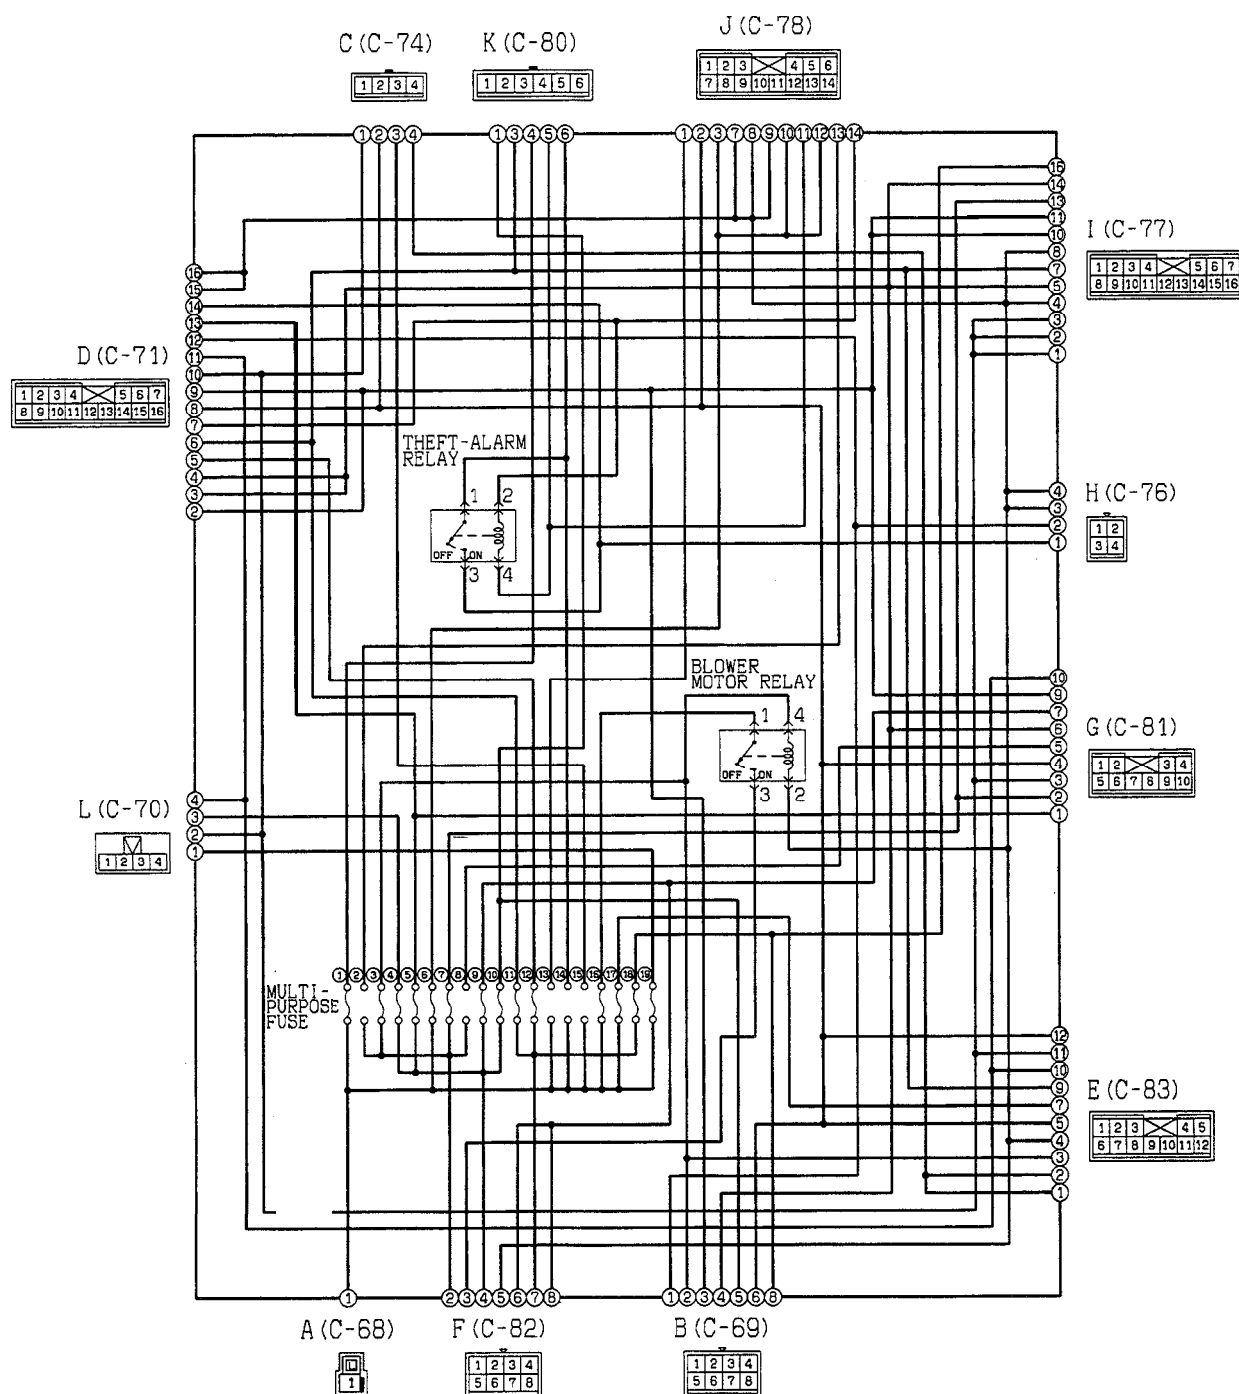


HROOM00AA

Remarks

- (1) Alphabets assigned to the connectors are keyed to those assigned to connectors on P.19
- (2) Terminals of the harness side connector are indicated in parentheses ().


TSB Revision

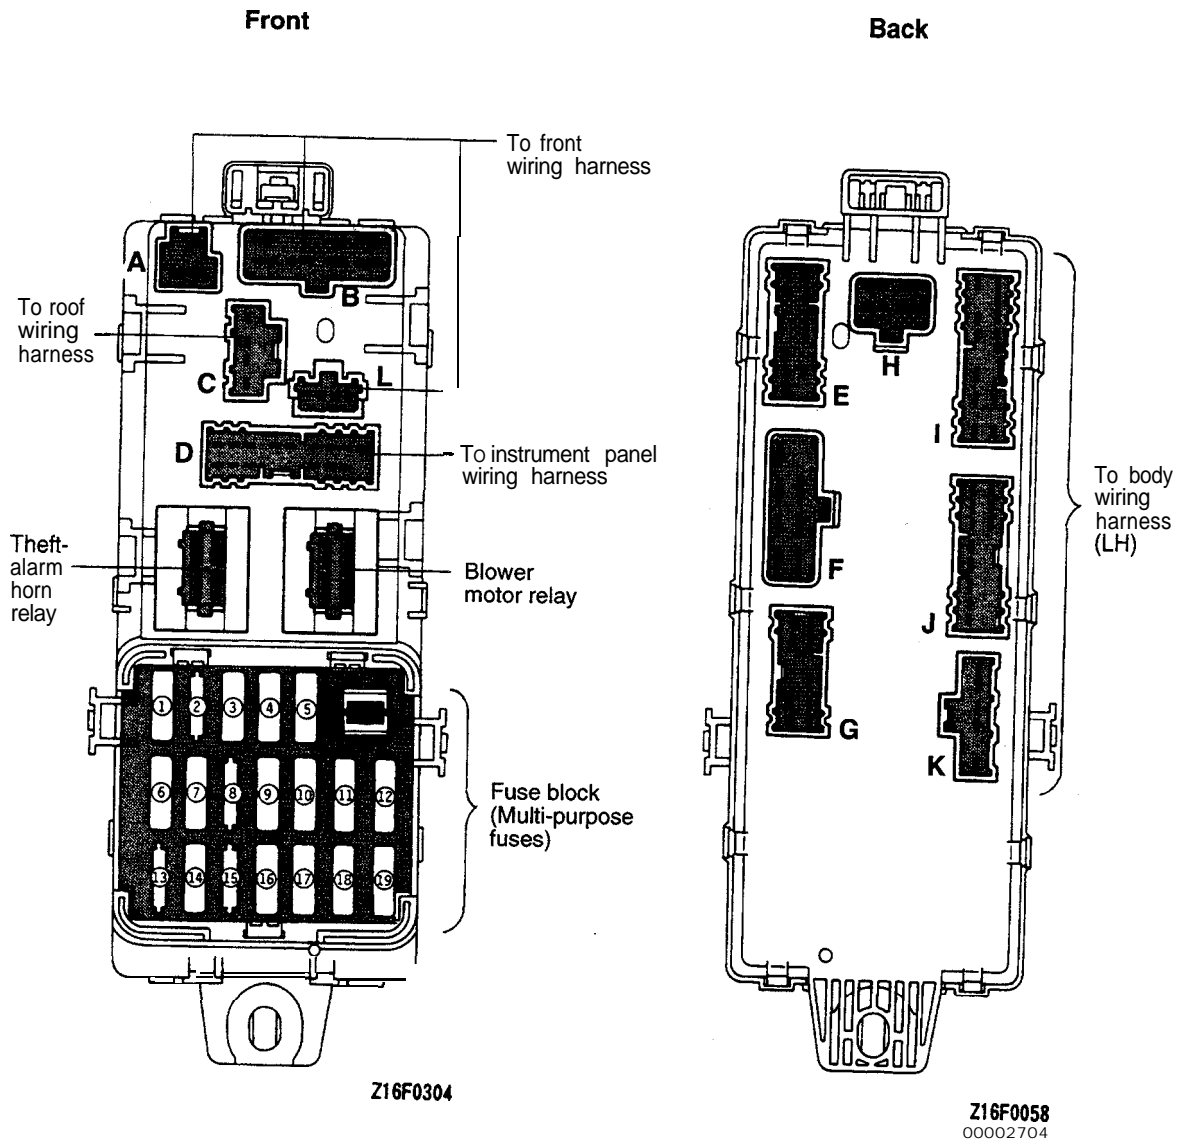

CENTRALIZED JUNCTION

FUSIBLE LINK (Relay box in engine compartment)

No.	Circuit	Housing color	Rated capacity (A)
1	Generator circuit	Wine red	120
2	Pop-up motor circuit (Up to 1993 models)	Pink	30
3	Lighting circuit	Green	40
4	Ignition switch circuit	Pink	30
5	Radiator fan motor and condenser fan motor circuit	Green	40
6	Junction block (Multipurpose fuse (1),(6),(14),(16),(17), (19))	Green	40
7	ABS circuit	Yellow	60
8	Top stack circuit <Convertible>	Pink	30
9	Power window circuit	Pink	30
10	Defogger circuit	Green	40
11	Active aero circuit <Hatchback>	Pink	30

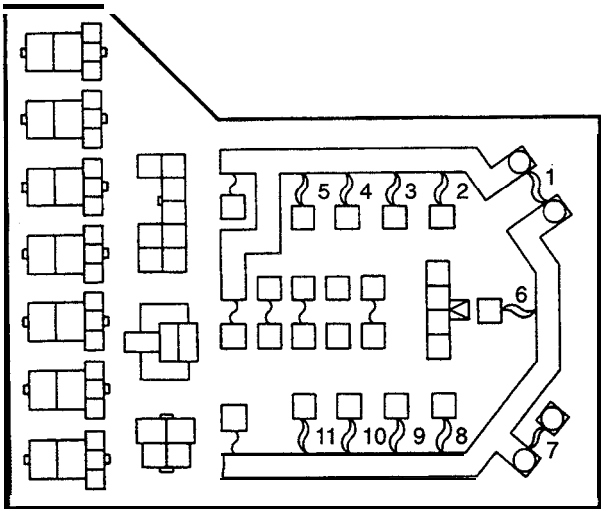

W16F0256


DEDICATED FUSE

Power supply circuit	No.	Rated capacity (A)	Housing color	Circuit
Battery	1	20	Yellow	MFI circuit
Taillight relay	2	15	Blue	Taillight circuit
Fusible link (6)	3	10	Red	Horn circuit
Fusible link (3)	4	15	Red	Fog light circuit
Headlight relay	5	10	Red	Upper beam circuit
Battery	6	10	Red	Hazard light circuit
	7*1	10	Red	ABS circuit
	7*2	20	Yellow	Sunroof circuit
Fusible link (6)	a	20	Yellow	Condenser fan motor circuit
	9	10	Red	Air conditioning circuit
Defogger relay	10	10	Red	Remote controlled mirror heater circuit


NOTE

*1: Vehicles produced up to Oct. 1993.


*2: Vehicles with sunroof
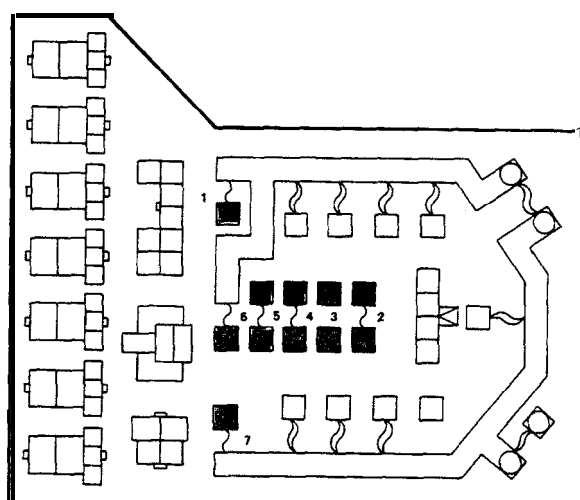
<Relay box in engine compartment>


Z16F0256

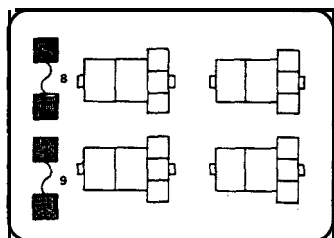**<Air conditioning relay box
in engine compartment>**

Z16F0002
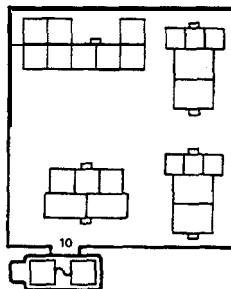
<Interior relay box>**Up to 1993 models From 1994 models**


Z16F0003

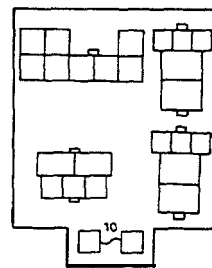Z16F0431
00002705

MULTI-PURPOSE FUSE (In junction block)

Power supply circuit		No.	Rated capacity (A)	Load circuit
Battery		1	10	Seat belt solenoid, Active aero control unit, MFI relay
—		2	—	—
Ignition switch	IG ₂	3	10	Radiator fan motor relay, Air conditioning compressor lock controller, Blower motor relay, Air conditioning control unit, ABS relay* ¹ , ECS control unit* ³ , Condenser fan motor relay
		4	10	Audio, Motor antenna control unit, Auto-cruise control unit, ETACS unit
	ACC	5	15	Remote controlled mirror, Cigarette lighter
Battery		6	10	Door lock power relay, Motor antenna control unit
Ignition switch IG ₂		7	10	ELC-4A/T control module
—		8	—	—
Ignition switch	ACC	9	15	Wiper relay, Wiper motor, Washer motor, Rear intermittent wiper relay, keyless control unit
		10	15	Accessory socket, ETACS unit
	IG ₁	11	15	Combination meter, Combination gauge, ETACS unit, Speed sensor, Motor antenna control unit, Turn signal and hazard flasher unit, Auto-cruise control main switch, Active aero control unit, SRS diagnosis unit, Auto-cruise relay
		12	15	Ignition coil, Power transistor, MFI relay, Engine control module
Battery		13* ²	15	Amplifier <radio and tape player>
Battery		14	10	Theft-alarm horn, Theft-alarm horn relay
—		15	—	—
Battery		16	30	Blower motor
		17	15	Stop light, High-mounted stop light
Ignition switch IG ₁		18	10	Back-up light, Light automatic shut-OFF unit, SRS diagnosis unit
Battery		19	10	Engine control module, ELC-4 A/T control module, ETACS unit, Dome light, Foot light, Door light, Luggage compartment light, Combination meter, Ignition key cylinder illumination light, Air conditioning control unit, Auto-cruise control unit, Audio, Light automatic shut-OFF unit, ECS control unit* ³ , Active aero control unit

NOTE

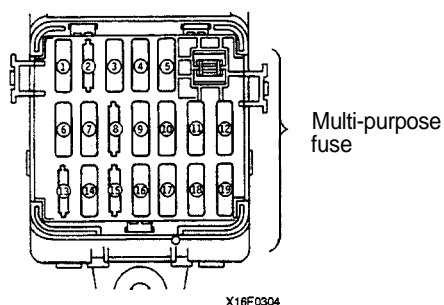(1)*¹: Vehicles produced up to Oct. 1993.(2)*²: From 1994 models.(3)*³: Up to 1995 models.


CENTRALIZED RELAY

Classification		Name	Classification		Name
Relay box in engine compartment	A-01X	Headlight relay	Air conditioning relay box in engine compartment	A-31X	Condenser fan motor relay (HI)
	A-02X	ABS power relay (vehicles produced up to Oct. 1993)		A-32X	Radiator fan motor control relay (Up to 1993 models)
	A-03X	Fog light relay		A-33X	Magnetic clutch relay
	A-04X	Radiator fan motor relay (LO)		A-34X	Condenser fan motor relay (LO)
	A-05X	Taillight relay	Interior relay box	C-04X	Door lock power relay 1
	A-06X	Horn relay		C-05X	Defogger relay (1994 models)
	A-07X	Radiator fan motor relay (HI)		C-06X	Defogger relay (Up to 1993 models, From 1995 models)
	A-08X	Pop-up motor relay (Up to 1993 models)		C-07X	Power window relay
	A-09X	Starter relay			
	A-10X	Generator relay			
	A-11X	IOD or Storage connector			

NOTE


IOD: Ignition Off Draw

<Relay box in engine compartment>

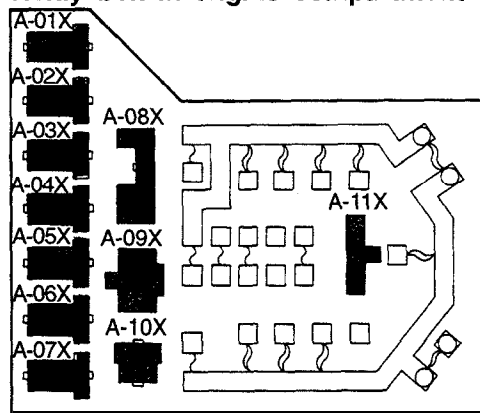

Y16F0256


<Air conditioning relay box in engine compartment>

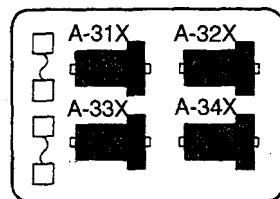

Y16F0002


<Interior relay box>

Up to 1993 models

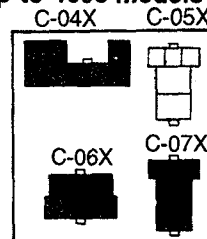

Y16F0003

From 1994 models

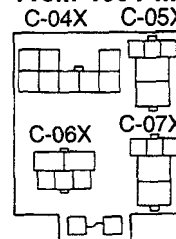Y16F0431
00002706