

INDICATORS AND WARNING LIGHTS

M54HKAX

Symbol		Operation
	Turn signal indicator	This indicator flashes, as do the same side of turn-signal light flashes. If the turn-signal light is burnt out, the indicator flashes faster than normal indicator. This indicator is common with hazard light.
	High beam indicator	This indicator illuminates when the headlights are on high beam.
	Door-ajar warning light	This warning light illuminates when the door or liftgate is either open or not completely closed.
	Seat belt warning light	This warning light illuminates for 6 seconds when the ignition key is in "ON" position, even if the driver has fastened his seat belt.
BRAKE	Brake warning light	This warning light illuminates when the ignition key is in "ON" position, and goes off after the engine has started. This indicator comes on when the parking brake is applied or brake fluid level falls less than the specific level.
	Low fuel warning light	This warning light illuminates when the fuel in the fuel tank falls less than approx. 10 liters (2.6 gals.).
	Charging system warning light	This warning light illuminates when the ignition key is in "ON" position, and goes off after the engine has started. This indicator comes on when the drive belt breaks or the trouble occurs in the charging system.
	Oil pressure warning light	This warning light illuminates when the ignition key is in "ON" position, and goes off after the engine has started. This indicator comes on when the oil fails or the trouble occurs in the oil circulating system while driving.
	Engine coolant level warning light	This warning light illuminates when the engine coolant level in the radiator reservoir tank falls below the specified level.
CHECK ENGINE	Check engine warning light	This warning light illuminates when the ignition key is turned to the "ON" position, but should go out in a few seconds. If the light illuminates while the vehicle is moving, there is a malfunction of a component related to exhaust gases.
CRUISE	Cruise control indicator	This indicator illuminates when the cruise control is activated.
OD OFF	Overdrive indicator	This indicator will light up when the overdrive switch is off.
SECURITY	SECURITY indicator (Vehicles with theft-alarm system)	This indicator illuminates for about 20 seconds when the theft-alarm system can be set, and then the illumination stops.

Symbol		Operation
ASC ON	Cruise control ON indicator	This indicator illuminates when the cruise control main switch is switched ON.
	Washer fluid level indicator	This indicator illuminates when the washer fluid level in the washer tank falls to a low level.
ANTI LOCK	Anti-lock braking system warning light	This warning light blinks 4 times in 0.6 to 0.8 second when the ignition key is placed in the "ON" position. With the ignition key in the "ST" position, the warning light stays on. Then move the ignition key from the "ST" position to the "ON" position, and the warning light blinks 3 times in 0.6 to 0.8 second if the warning light operates normally. This warning light illuminates when a malfunction is discovered in the anti-lock braking system.
PWR	Power/economy changeover indicator	This indicator illuminates when the Power/Economy select switch is set to the POWER position.
SRS	Supplemental Restraint System (SRS) warning light	When the ignition key is in ON position, the warning light illuminates for about 7 seconds to indicate that the light itself is illuminating normally. This light illuminates if there is a malfunction of the Supplemental Restraint System.
4WS OIL	4-wheel steering oil level warning light	This warning light illuminates when the power steering oil level in the reservoir tank falls to a low level.
 TOUR	Tour mode indicator (for Active Exhaust System)	This indicator illuminates when the active exhaust system switch is set to the TOUR mode position.
TOUR SPORT	Tour/Sport mode indicator (for Electronic Control Suspension)	When the ignition key is in ON position, depending on which is set, either the TOUR or SPORT mode indicator remain illuminated.
AERO	Active aero system warning light	This warning light illuminates in the event of a malfunction in the active aero system. It will also illuminate when the ignition key is turned to the "ON" position, and then it will go out in a few seconds. If it does not illuminate when the ignition key is turned to the "ON" position, or it remains on, take your car to your nearest authorized dealer and have the system checked.