
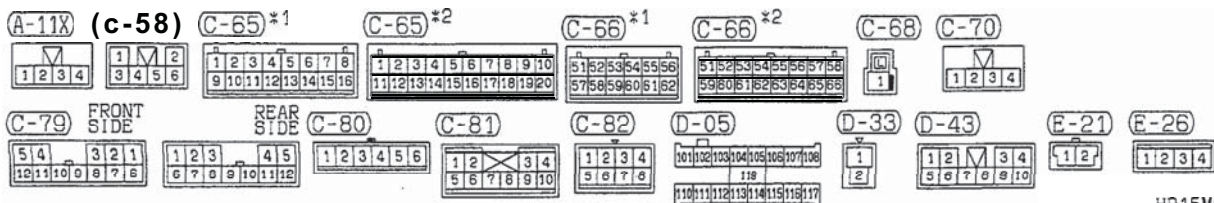



## BUZZER CIRCUIT (UP TO 1993 MODELS)

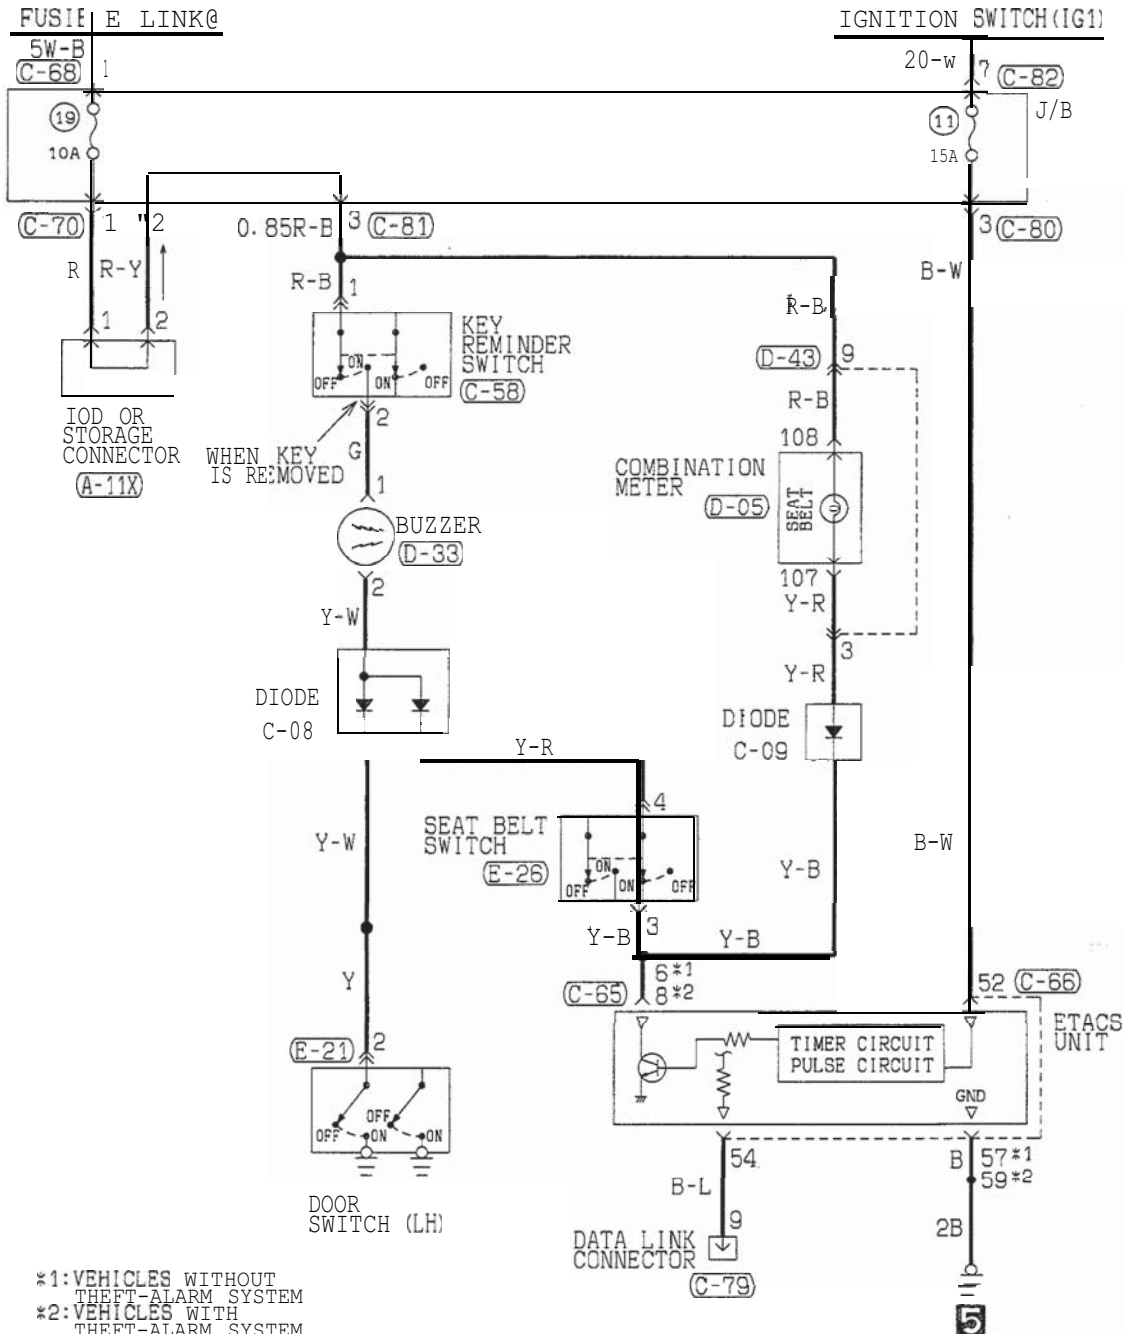




[illegible]

COMPONENT LOCATION

Name	Symbol	Name	Symbol
Buzzer	C	ETACS unit	A
Diode (seat belt warning)	B		

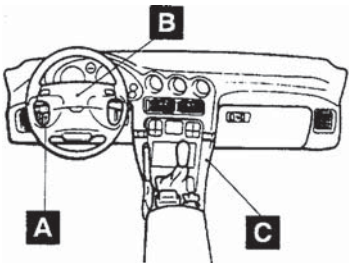

P19F0134

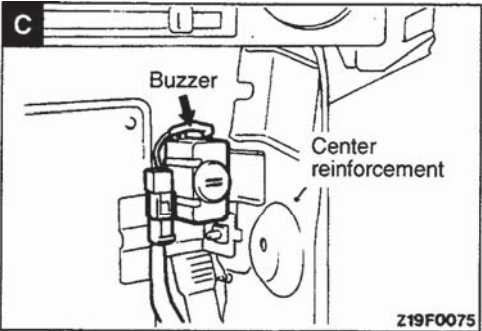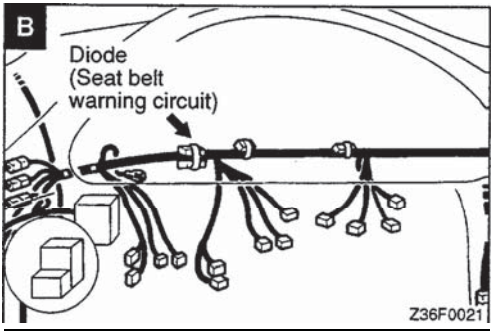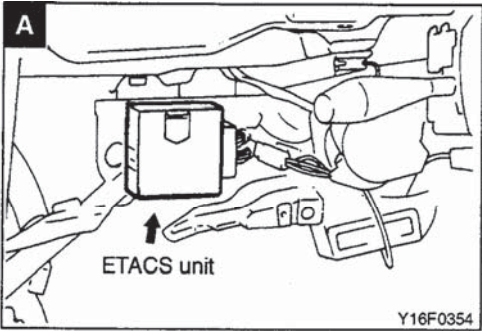

**OPERATION****<Key-reminder warning>**

- Battery positive voltage is continuously applied to the key-reminder switch.
- If the driver's door is opened (door switch ON) with the key inserted in the ignition switch (key-reminder switch ON), the buzzer sounds to warn that the key has been left in the switch.

**<Seat belt warning>**

- When the ignition switch is turned on, the timer circuit and pulse circuit will flicker the seat belt warning light for approx. 6 seconds with the buzzer intermittently sounding.
- If the seat belt is fastened for the while, the seat belt switch will be turned off and the buzzer will stop.

**TROUBLESHOOTING HINTS**

Problem	Check method
The key-reminder warning doesn't sound.	<ul style="list-style-type: none"> <li>• Check the door switch. (Refer to GROUP 42–Door Assembly.)</li> </ul>
The seat belt warning function is OK.	<ul style="list-style-type: none"> <li>• Check the buzzer. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The seat belt warning doesn't function.	<ul style="list-style-type: none"> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The seat belt warning light doesn't function.	<ul style="list-style-type: none"> <li>• Check the key-reminder switch. (Refer to GROUP M–Ignition Switch.)</li> </ul>
The seat belt warning light flashes.	<ul style="list-style-type: none"> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The seat belt warning light also does not function (and the key-reminder warning also does not function).	<ul style="list-style-type: none"> <li>• Check the key-reminder switch. (Refer to GROUP M–Ignition Switch.)</li> </ul>
The buzzer doesn't stop even through the driver's seat belt has been buckled.	<ul style="list-style-type: none"> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The seat belt warning light doesn't flashes (but the buzzer sounds).	<ul style="list-style-type: none"> <li>• Check the light bulb.</li> <li>• Check the key-reminder switch. (Refer to GROUP 54–Ignition Switch.)</li> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The warning light does not flash and the warning buzzer also does not sound.	<ul style="list-style-type: none"> <li>• Check the ignition switch input signal. (Refer to GROUP 52A–Troubleshooting.)</li> <li>• Check the key-reminder switch. (Refer to GROUP 54–Ignition Switch.)</li> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>
The warning light flashes, but the warning buzzer does not sound.	<ul style="list-style-type: none"> <li>• Check the key-reminder switch. (Refer to GROUP M–Ignition Switch.)</li> <li>• Check the seat belt switch. (Refer to GROUP 52A–Seat Belt.)</li> </ul>