




ACTIVE EXHAUST SYSTEM

COMPONENT LOCATION


Name	Symbol	Name	Symbol
Active exhaust control unit	C	Engine control module	B
Actuator assembly	D	Power window relay	A

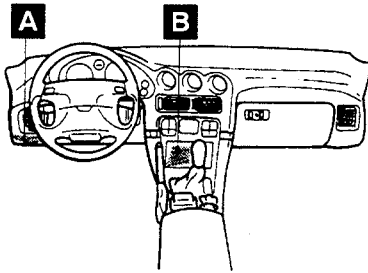


I19F0134

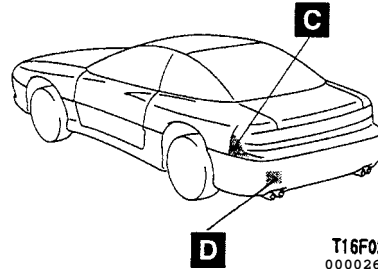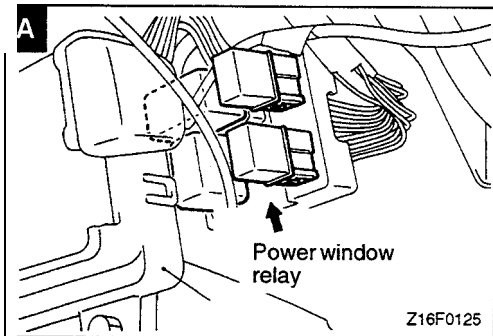T16F0268
00002666


Z16F0125

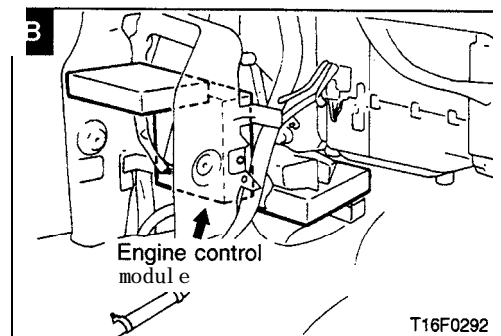

T16F0292

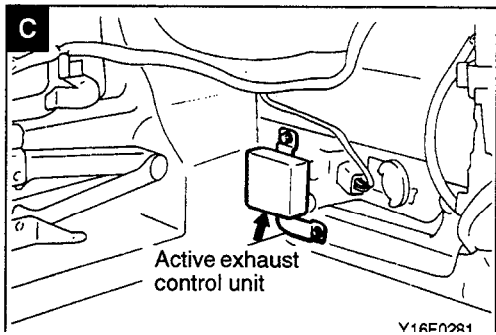


V16F0281

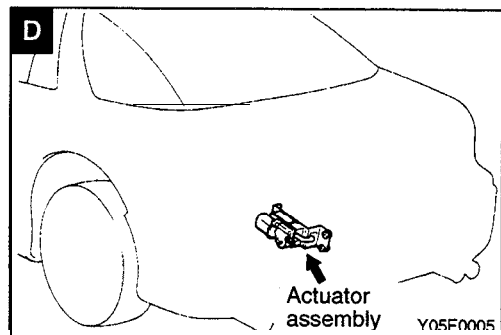

Y05F0005


ACTIVE EXHAUST SYSTEM CIRCUIT (UP TO 1993 MODELS)

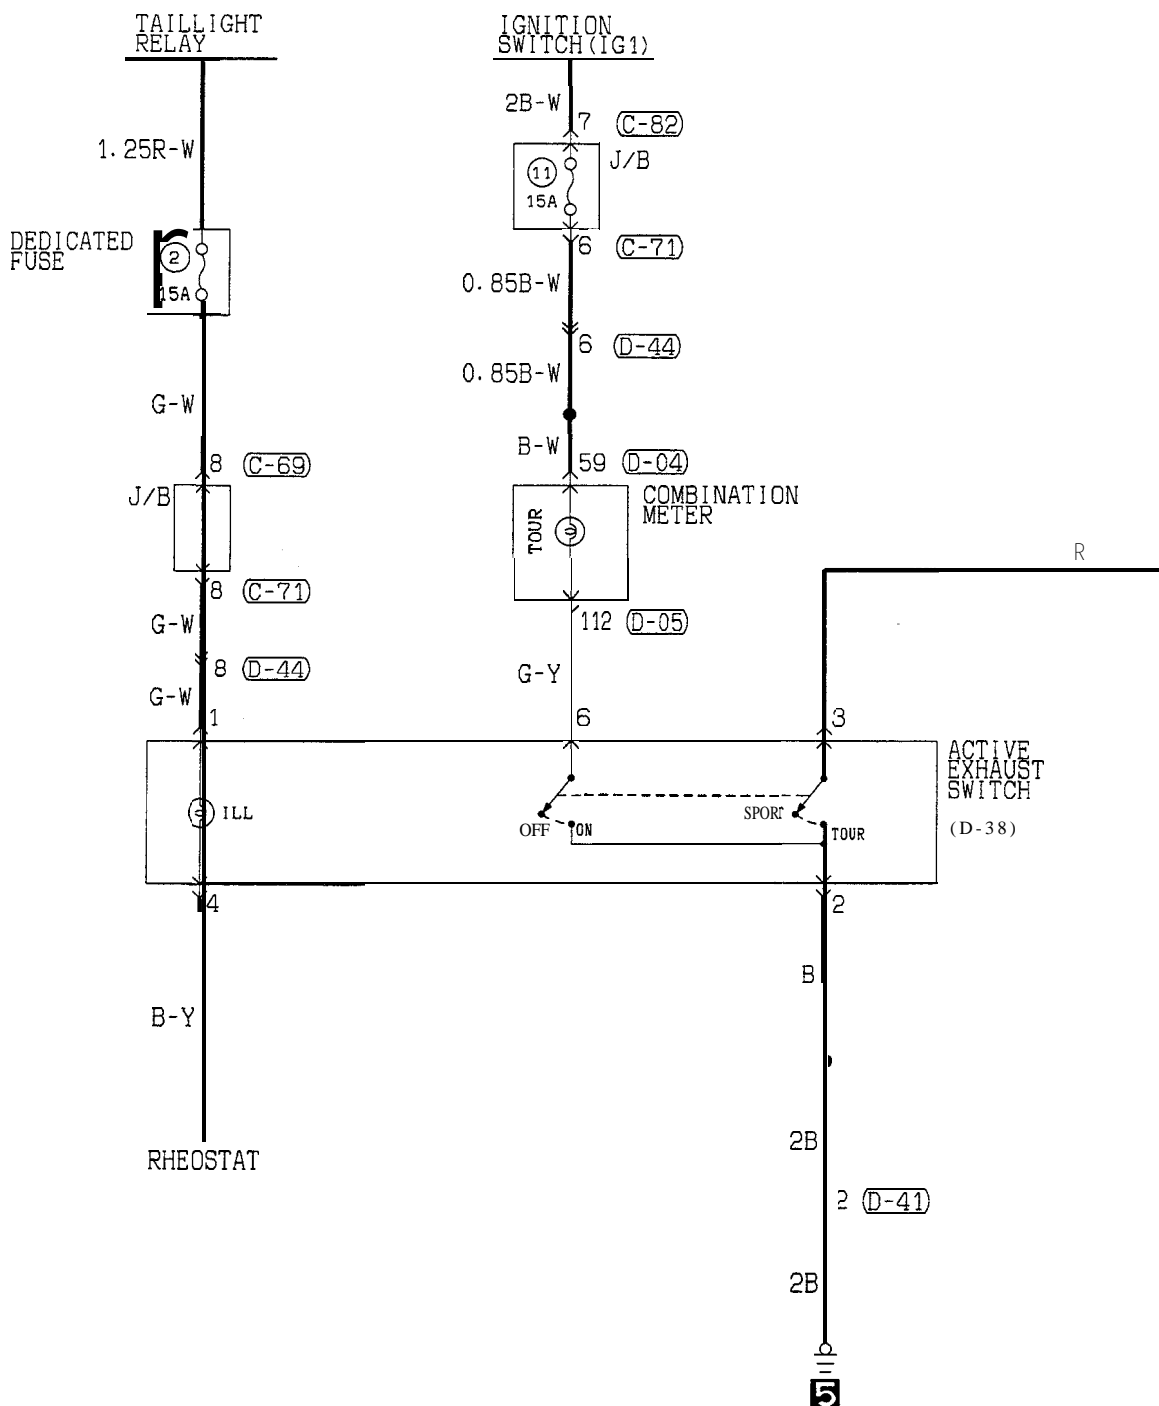

(C-69)



 
(C-71)




(C-82)



 (D-04)



(D-05)

 


(D-38)




(D-41)




 (D-44)



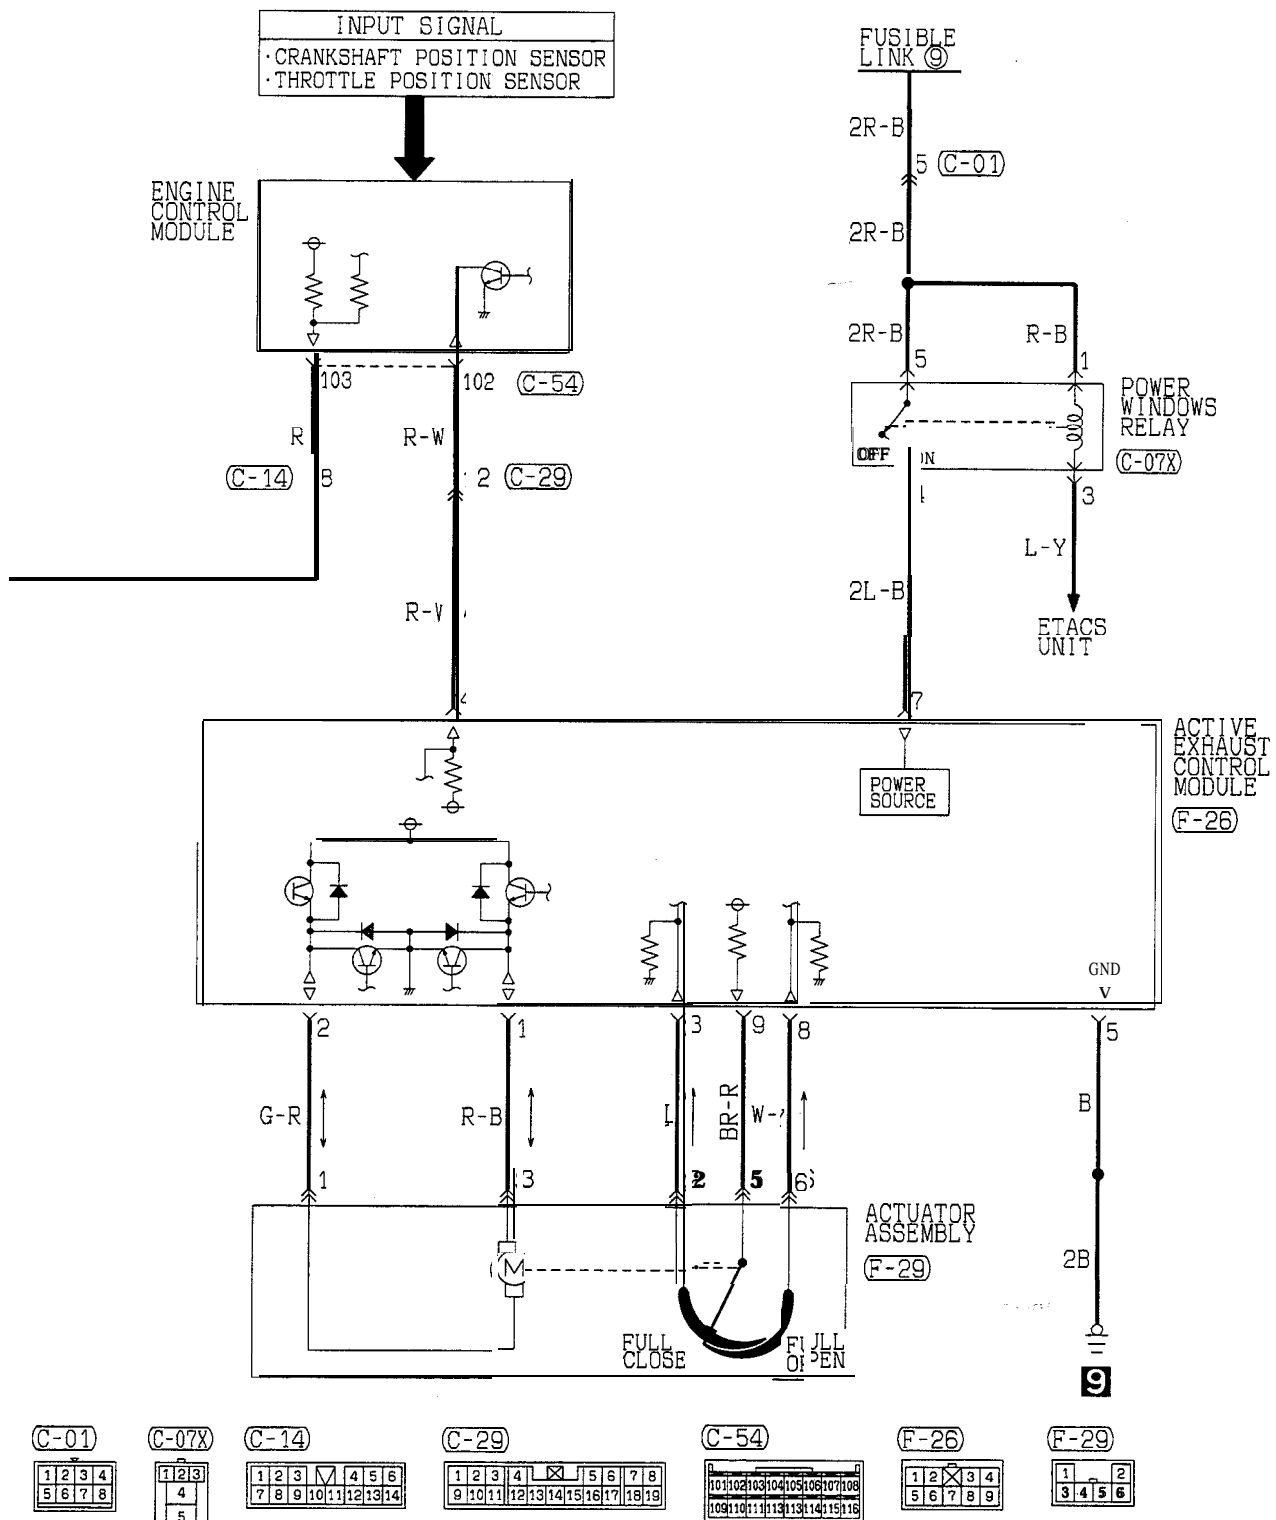

ACTIVE EXHAUST SYSTEM CIRCUIT (1994 MODELS)

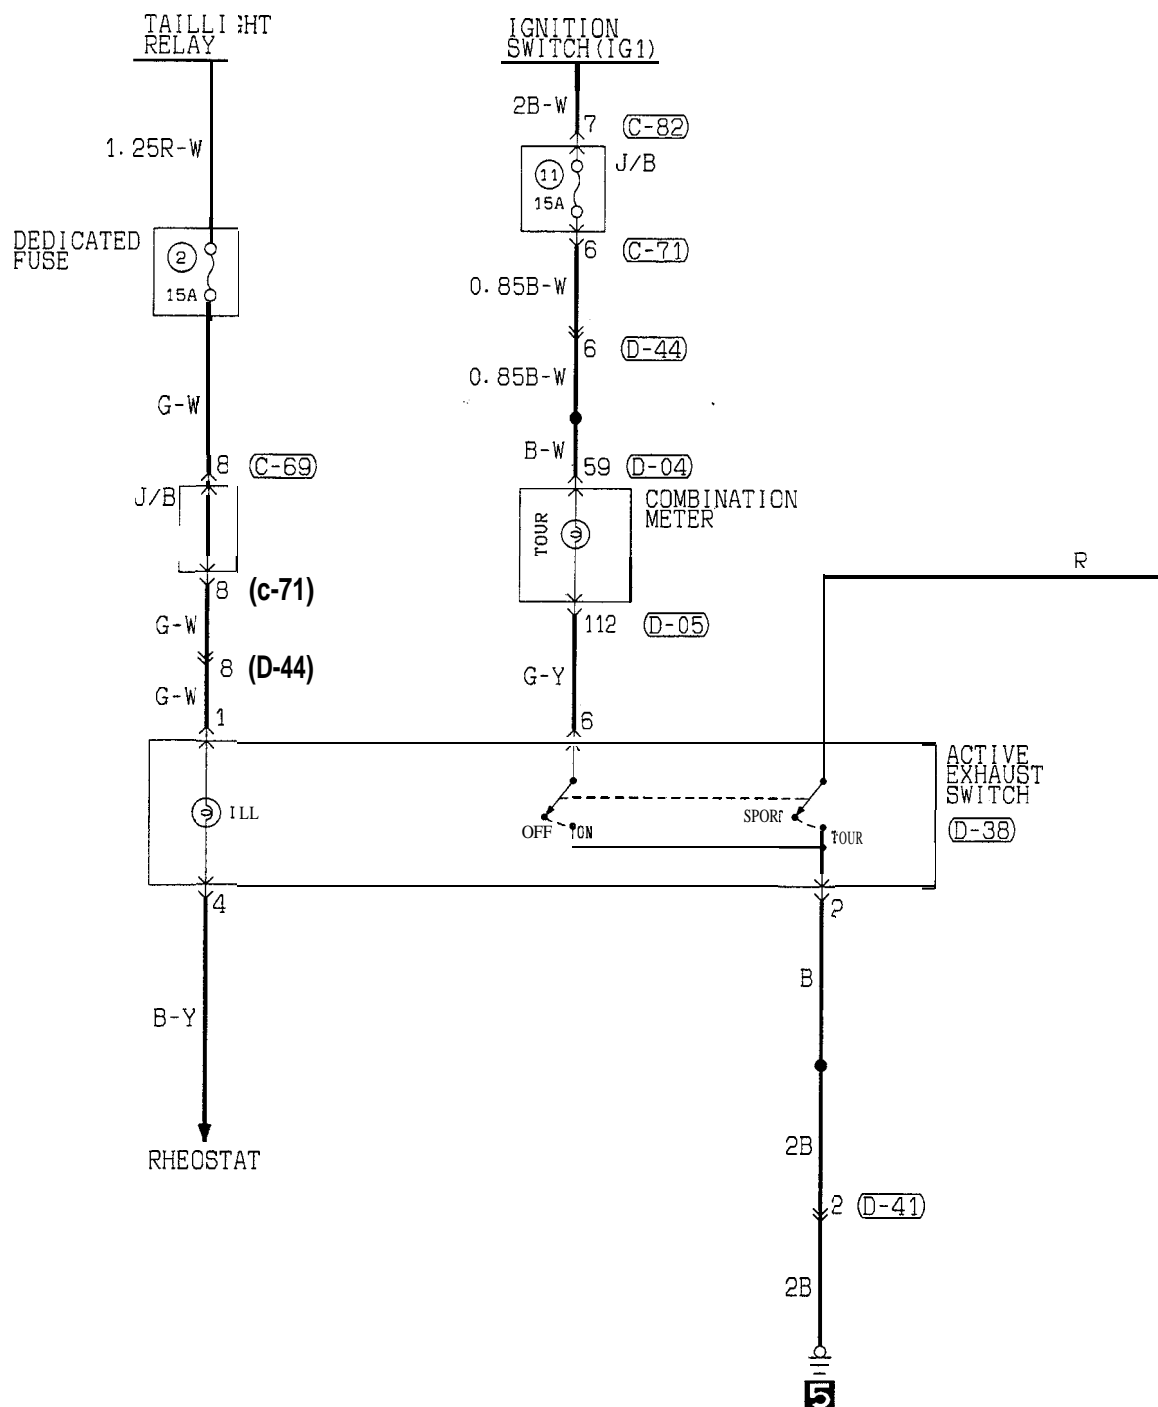

C-69

1	2	3	4
5	6	7	8

C-71

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

C-82

1	2	3	4
5	6	7	8

D-04

51	52	53	54	55	56	57	58
59							
60	61	62	63	64	65	66	67

D-05

101	102	103	104	105	106	107	108
109							
110	111	112	113	114	115	116	117

D-38

1	2
3	4
5	6

D-41

1	2
3	4

D-44

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

